


Quick Reference Card

V-STROM 1050XT

Tire pressure	Front: 2,5 Bar / 36 psi, Back: 2,9 Bar / 42 psi (both with 1 or 2 riders)
Suspension (back)	Softer: Turn left, Stiffer: Turn right (default is 11 clicks, starting left)

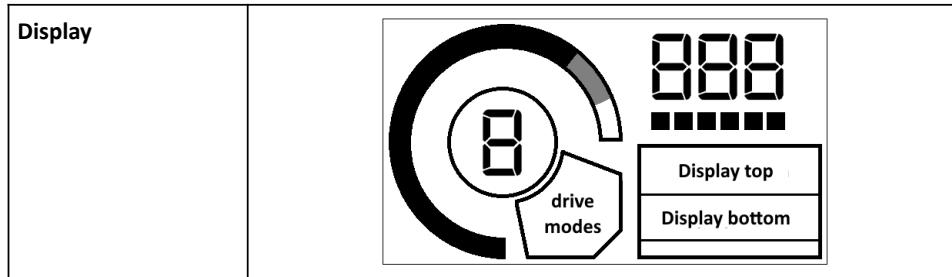

Drive mode (SDMS)	Mode A: <u>Sharp</u> response at all throttle positions Mode C: <u>Moderate</u> response at all throttle positions
-------------------	---

Traction Control (TC)	Mode 1: Sensitivity level TC in the <u>lowest</u> position Mode 3: Sensitivity level TC in the <u>highest</u> position
-----------------------	---

ABS	Mode 1: Intervention of the ABS is <u>minimal</u> Mode 2: Intervention of the ABS is <u>maximum</u>
-----	--

Adjust driving settings	<i>Close the throttle completely to adjust the settings</i>		
Select setting		Multiple times if needed	
SDMS/TC: Adjust setting by pressing the up or down button ABS: Click the up or down button twice (2th time for 2 seconds)			
Exit		Multiple times if needed	

Adjust display top	Select		Multiple times if needed
--------------------	--------	--	--------------------------

Adjust display bottom	Select		Multiple times if needed
-----------------------	--------	--	--------------------------

Reset day counter (bottom)	(select day counter first)		2 sec
----------------------------	----------------------------	--	-------

Adjust display brightness (bottom)	(select display brightness first)		Multiple times if needed
------------------------------------	-----------------------------------	--	--------------------------

Quick Reference Card

V-STROM 1050XT


Settings Menu	Enter Menu		2 sec
Select the correct setting by pressing the up/down button:			
	DATE&TIME	RPM SET	UNIT
SERVICE HILL HOLD SET			
Select item		2 sec	
Adjust the settings (varies by setting)			
Select/confirm		2 sec	
Back/Exit		2 sec	Multiple times if needed

Change Clock (summer & wintertime)	See "Settings Menu" and select DATE&TIME		
Select the right number by pressing the up/down button			
Select number		2 sec	
Change the number by pressing the up/down button			
Confirm change		2 sec	Repeat previous two steps if necessary

Other settings	See "Settings Menu" and select the setting you want to change!		
When disconnected from the battery, settings are set to default!			
RPM SET	Configure the high RPM warning light		
Mode	Set the illumination (on, flashing, off) of the indicator light (white LED above the display)		
Main	Set the lighting timing of the LED		
Bright	Adjust the brightness of the LED		
UNIT	Instellen	Settings for km/h/mpg, consumption and C°/F	
SERVICE	Instellen	Set date and/or mileage for maintenance	
HILL HOLD SET	Instellen	Turn Hill Hold on or off	

Quick Reference Card

V-STROM 1050XT

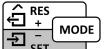Cruise Control	<i>From 50 km/h and fourth gear!</i>		
	Turn the Cruise Control "on"		Button on right handle
	Lock the speed		
	Change speed	Press the up/down button: - Short press: at about 1 km/h - Long press: continuously increase/decrease	
	Reset	Close throttle, engage clutch or brake	
	TC Off	Cruise control button "off" or press Mode button	

Hill Hold	Prerequisite	Hill Hold is enabled (in the settings)
	Activate	Hill Hold is activated automatically if all of the events below have happened/are true: - The motorcycle has stopped on a slope - The brake(s) has/have been used to stop - The engine is in gear
	Deactivate	Happens after one of the following actions: - After 30 seconds - The motorcycle drives away - Quickly pull the brake lever 2x - The side stand is unfolded - The gear is put into neutral
	Adjust settings	Via the settings menu (on/off)

Suzuki Heated grips	Press the button on the left handle one or multiple times for the correct heat level. The small flashing light shows the selected heat level.		
	Press 1x	Heat level 3 (max)	Light flashes 3x
	Press again	Heat level 2	Light flashes 2x
	Press again	Heat level 1 (min)	Light flashes 1x
	Press again	Heated grips off	Light is off

Quick Reference Card

V-STROM 1050XT

Turn off ABS	The ABS cannot be turned off by a switch or setting. This trick shows you how you can disable the ABS by fooling the system. Restarting your engine turns the ABS on again.
Prerequisites	Traction Control must be turned off (The TC light must be ON)
Steps to take	<ol style="list-style-type: none"> 1. Start the bike and move it a bit so the ABS light goes OFF 2. Put the bike on the central stand and make sure the rear wheel can spin (without moving the bike) 3. Grab and hold the front brake, while spinning up the rear wheel by switching from gear 1 to higher gears (up to 4) 4. If the ABS light turns ON (together with an  icon), the system is fooled and ABS is disabled <p>NB. You need to re-do these steps if you turn off the engine.</p>